

**APPENDIX H:  
ACQUIRING THE SOFTWARE**

## **To Receive the ALECALL Software Package via the Internet**

- Step 1. Log onto your internet account.
- Step 2. At the prompt type "ftp nita.its.bldrdoc.gov" and press <ENTER>.
- Step 3. Login as "ftp" and press <ENTER>.
- Step 4. Type your complete e-mail address at the password prompt (ex. "ale-cd@its.bldrdoc.gov") and press <ENTER>.
- Step 5. Type "cd dist/ale-cd" and press <ENTER> to change to the ale-cd directory.
- Step 6. Type "bin" and press <ENTER> to change to binary transfer mode of FTP.
- Step 7. Type "get ale-1230.exe" (or the name of the desired file) and press <ENTER>. This will copy ale-1230.exe to your internet account. Be patient, as it may take a few moments to transfer the file which is about 1/3 Megabyte in length.
- Step 8. Type "quit" from FTP ("logout" from your account prompt) or whatever you usually do to exit. Press <ENTER> to log off the system and return to your internet account.

## **How to extract the ALECALL software**

- Step 1. Copy ALE-1230.EXE to the directory on your DOS system where you would like to keep the ALECALL software. NOTE: The fully extracted software requires 4.3 MB of space! It will not fit on a high capacity 1.44 MB floppy.
- Step 2. At the DOS prompt, type "ale-1230 -d" and press <ENTER>. Failure to use the "-d" option will extract all files into your current directory. The following files will be extracted into your current directory if you use the "-d" option to create subdirectories:

COREL50	<DIR>	02-27-92	5:12p
EXE	<DIR>	02-16-95	10:00a
LOGSHEET	<DIR>	02-16-95	10:00a
PRO	<DIR>	02-16-95	10:00a
TON	<DIR>	02-16-95	10:00a
ALE-WAN2	PS	42,238	02-24-95 5:47p
ALE-WAN2	TXT	1,680	02-24-95 5:46p
ALE-WAN2	WP5	2,837	02-24-95 5:45p
CD-INFO	PS	260,880	02-15-95 3:38p
CD-INFO	TXT	33,918	02-17-95 5:01p
CD-INFO	WP5	52,507	02-07-95 10:12a
CD-INTRO	PS	76,246	02-15-95 4:09p
CD-INTRO	TXT	4,140	02-17-95 5:11p
CD-INTRO	WP	5,527	02-07-95 8:52a
CDLAYOUT	PS	42,808	02-15-95 3:34p
CDLAYOUT	TXT	5,918	02-17-95 5:23p
CDLAYOUT	WP5	14,895	01-20-95 4:49p
EVALUATE	PS	40,131	02-15-95 3:39p
EVALUATE	TXT	1,810	02-15-95 3:39p
EVALUATE	WP5	2,796	01-10-95 2:28p
FTIP-AP1	PS	101,150	02-15-95 3:31p
FTIP-AP1	XT	36,060	02-15-95 3:30p
FTIP-AP1	WP5	39,306	01-26-95 4:00p
FTIP-MAN	PS	260,583	02-15-95 3:28p
FTIP-MAN	TXT	30,444	02-15-95 3:26p
FTIP-MAN	WP5	33,274	02-15-95 3:20p
README	1ST	8,721	02-23-95 6:00p
README	TOO	4,172	02-27-95 5:17p
SLOTWIDTH	PS	182,665	02-15-95 3:45p
SLOTWIDTH	WP5	30,014	06-29-94 1:23p

The README.1ST file should be printed and read first. The other files are documentation, and *normally* exist in three forms: Word Perfect 5.1 (\*.wp5), Adobe Post Script for copying directly to a PostScript printer (\*.ps), and an ASCII text version (\*.txt). A few files do *not* exist in all 3 formats.

The "exe" directory contains the executable files (alecall.exe, aletime.exe, etc).

The "ton" directory contains the sample tone files (\*.ton).

The "logsheet" directory contains the test log sheets which are Microsoft Excel files, version 4.0a. (\*.xls), and PostScript versions (\*.ps).

The "pro" directory contains the ALE protocol files (\*.pro). These files are used as the source for the "alecall" program to generate the sound files.

The "corel50" directory contains Corel version 5.0 drawings. They are **not** essential and are provided only as supplementary information for those who have the Corel program.

In the current directory, WordPerfect 5.1 files are \*.wp5, ASCII text files are \*.txt, and PostScript files are \*.ps.

**\*\*Please read the "readme.1st" file for the most recent updates.**



